


Composition: Electronic Media II

Fall 2010


Using the Digi 003 in Pro Tools, Peak, and Max/MSP

1. Output of Sound from the Mac


- a. Playback can either be chosen to be played back from the Mac or the Digidesign 003.
- b. To choose sound output for the Mac or Digidesign 003, open System Preferences from the Mac menu:

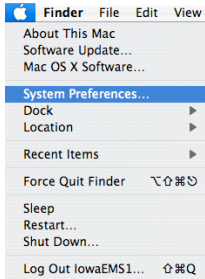

- c. Then choose Sound:




- d. And choose the appropriate setting, which will most likely be the Digidesign HW (003) for most purposes for this class:

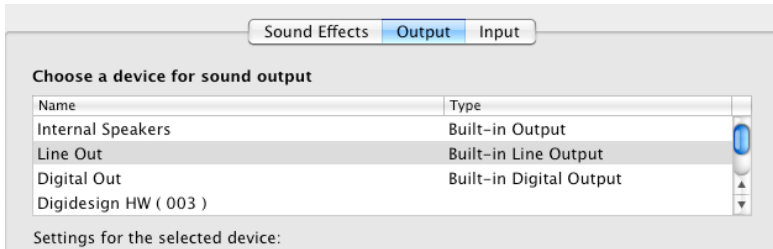


2. Pro Tools

- a. Pro Tools requires Digidesign hardware.
- b. The following message will appear when Pro Tools is opened without the Digidesign 003 being turned on (or other appropriate hardware):

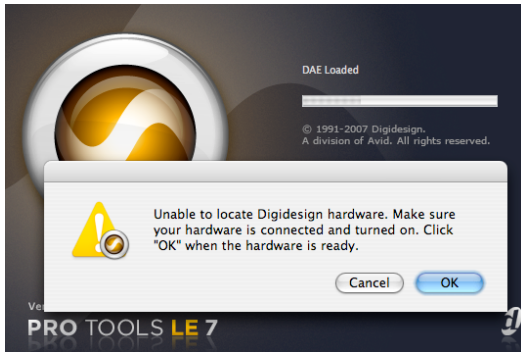


3. Peak; In order to use the Digidesign 003 with Peak, you will have to do the following steps.

- a. In the menu, select Audio:

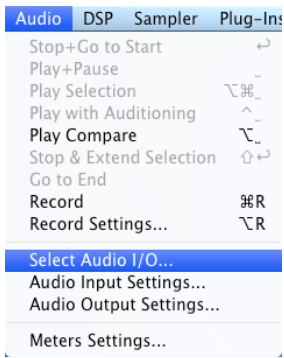


b. Select Audio I/O and choose Digidesign HW (003) and click OK:

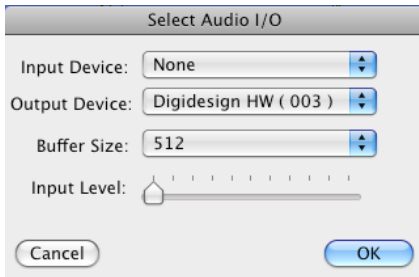


4. Max/MSP; In order to use the Digi 003 with MAX/MSP, you will have to use the following steps:


a. Choose DSP Status from the Options menu:

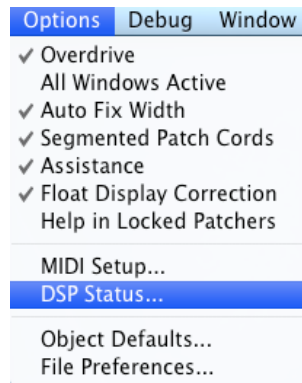


b. Make sure the Audio is turned to On:

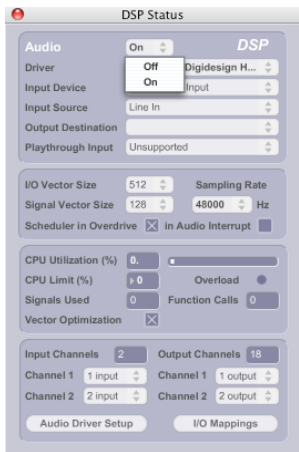

c. Choose Digidesign HW (003) from the dropdown menu under Driver:

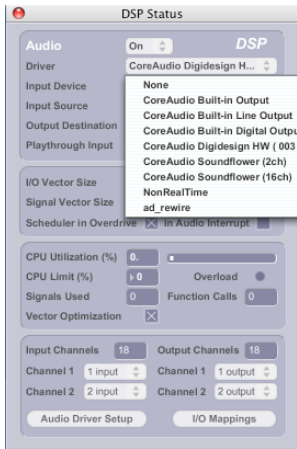

d. Choose Digidesign HW (003) from the dropdown menu under Input Device:

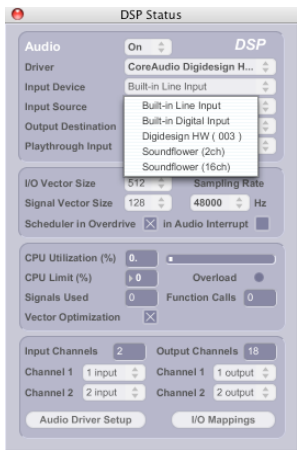

e. This is what it should look like with everything chosen correctly:

